



## AC Current Transformers 50/60Hz HY52 Series

| Part Number | Electrical Characteristic |                  |                          |                  |                       | Photo                                                                               |
|-------------|---------------------------|------------------|--------------------------|------------------|-----------------------|-------------------------------------------------------------------------------------|
|             | $I_R$<br>(A)              | $V_{out}$<br>(V) | Accuracy<br>class<br>(%) | $I_{max}$<br>(A) | $R_L$<br>( $\Omega$ ) |                                                                                     |
| HY52-6-575U | 5                         | 2.5              | 20                       | 10               | 100                   |  |
| HY52-6-505U | 5                         | 0.1              | 5                        | 10               | 10                    |                                                                                     |
| HY52-6-655U | 10                        | 0.1              | 5                        | 20               | 10                    |                                                                                     |
| HY52-6-505X | 10                        | 0.2              | 10                       | 30               | 10                    |                                                                                     |
| HY52-6-655X | 10                        | 1                | 10                       | 20               | 100                   |                                                                                     |
| HY52-6-655F | 10                        | 0.1              | 10                       | 20               | 10                    |                                                                                     |

Mechanical Dimensions in mm

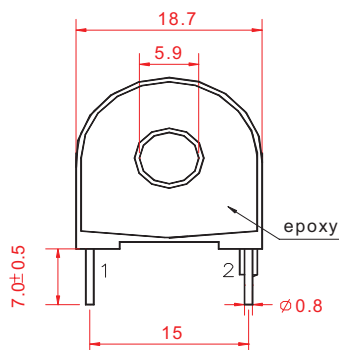

Front view

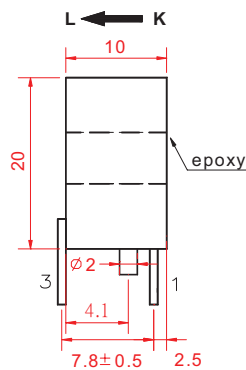


Left view




Bottom view

Test Circuit

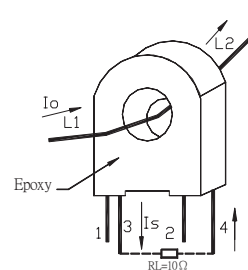

3-4

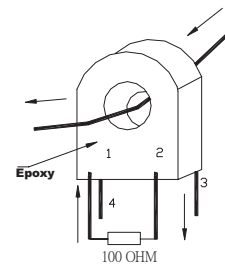

'1-2

## We are here for you. Addresses and Contacts.

---

### Headquarter Switzerland:

Angst+Pfister Sensors and Power AG  
Thurgauerstrasse 66  
CH-8050 Zurich  
Phone +41 44 877 35 00  
[sensorsandpower@angst-pfister.com](mailto:sensorsandpower@angst-pfister.com)

### Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH  
Edisonstraße 16  
D-85716 Unterschleißheim  
Phone +49 89 374 288 87 00  
[sensorsandpower.de@angst-pfister.com](mailto:sensorsandpower.de@angst-pfister.com)

### Office North America:

Angst+Pfister North America Inc.  
10391 Brecksville Rd.  
US-Brecksville, OH 44141  
Phone +1 440 375-5212  
[info.apus@angst-pfister.com](mailto:info.apus@angst-pfister.com)

---

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>

---