

Complete Assembly Guide for PS28/PS40 Series of Encoder Modules

Step 1 :

Put the base on the motor.



Step 2 :

Put the centering tool on the shaft.



Step 3 :

Fix the screws through base onto the motor.




Step 4 :

Remove the centering tool.



Step 5 :


Put the space tool on the base.

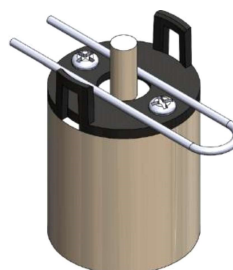

Complete Assembly Guide for PS28/PS40 Series of Encoder Modules


Step 6 :

Put the hubdisc on the space tool.

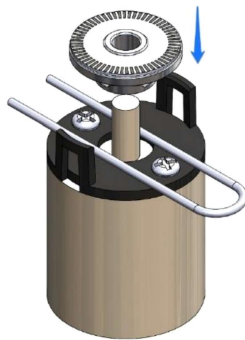


Step 7 :

Tighten up one set screw on the hubdisc.

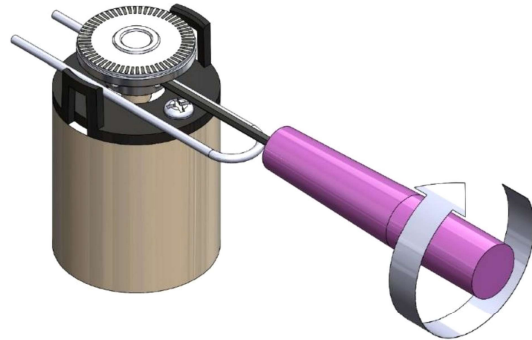


Step 8 :

Tighten up the other set screw on the hubdisc.

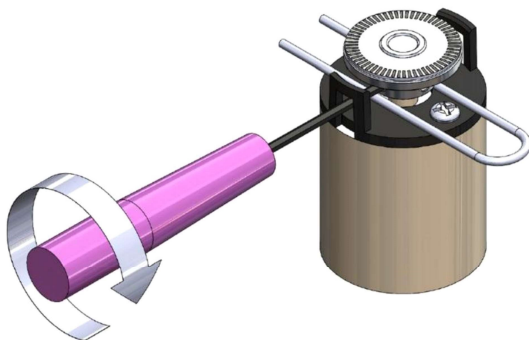

Step 9 :

Remove the space tool.

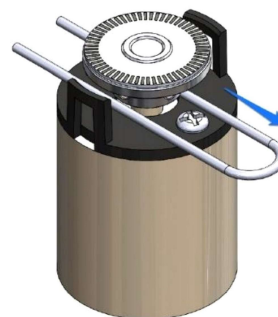

Step 10 :

Put the cover on the base.



Step 11 :

Make sure the latches are fixed. (2 latches for PS28 encoders; 4 latches for PS40 encoders.)



Assembly completed!!

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Office North America:

Angst+Pfister North America Inc.
10391 Brecksville Rd.
US-Brecksville, OH 44141
Phone +1 440 375-5212
info.apus@angst-pfister.com

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>
