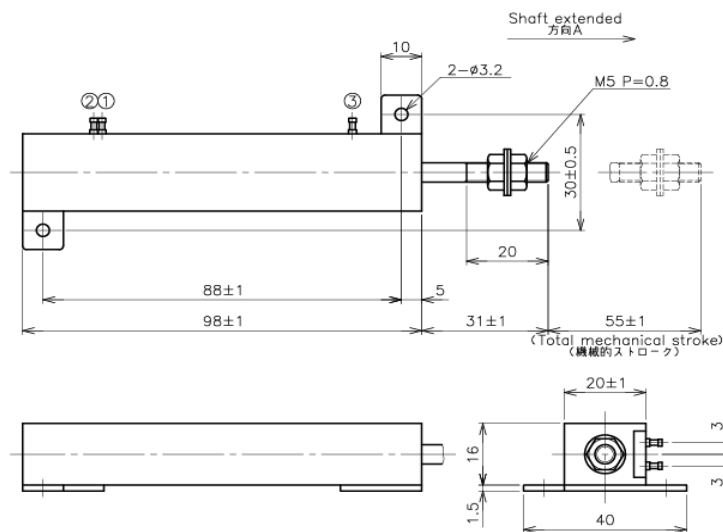
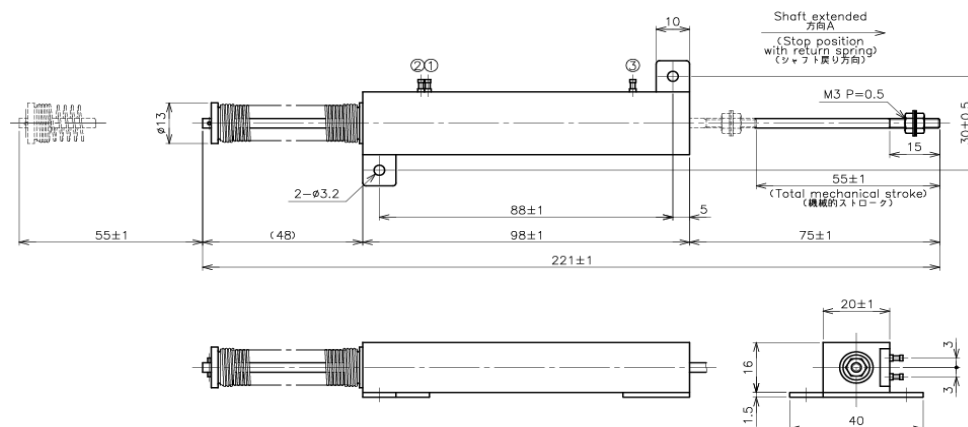


Conductive Plastic Linear Sensor

LP-50F Series


- Conductive Plastic Linear Sensor
- Effective Electrical Travel : 50mm±0.5mm
- Independent Linearity : ±0.5%

■Dimension [mm]**LP-50F****LP-50FB**


MIDORI MIDORI PRECISIONS
 URL: <http://www.midori.co.jp>
 E-mail: overseas@midori.co.jp

2015/1


■Output Characteristics

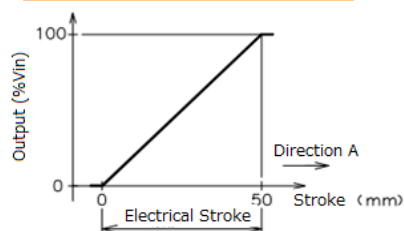

■Schematic

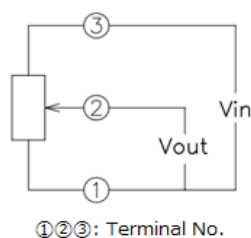

■Mounting

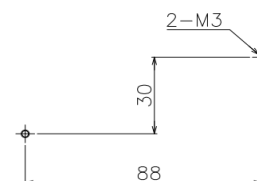

【Model No.】

LP-50F

LP-50FB

【Electrical Specifications】

Effective Electrical Travel	50±0.5	mm
Total Resistance	1、 2、 5、 10	kΩ
Total Resistance Tolerance	±20	%
Independent Linearity	±0.5 (Special Linearity: ±0.2)	%
Rated Dissipation	1.5/70°C	W
Output Smoothness	MAX. 0.1	%
Insulation Resistance	MIN. 100 / DC 500V	MΩ
Dielectric Strength	AC500 / 1 Minute	V
Temperature Coefficient of Resistance	±400	ppm/K

【Mechanical Specifications】

Total Mechanical Travel	55±1	mm
Friction	MAX. 0.5	MAX.1.7(Spring Strength) N
Mass	Approx. 75	g

【Environmental Specifications】

Life Cycles	MIN. 5 Million	Cycle
Category Temperature Range	-40~+100	°C
Storage Temperature Range	-40~+100	°C
Vibration	100m/s ² 500Hz 3 axis 2 hours each	
Shock	500m/s ² 11ms 6 directions 3 times	

■Accessories

LP-50F M5 nut
Plain washer 2 pieces each

LP-50FB M3 nut
Plain washer 2 pieces each

■Handling Instruction

- To avoid burnout of resistive element, do not supply more than 1mA current to terminal 2.
- Miswiring may cause burnout of resistive element.
- To reduce sliding noise, add load resistance should be more than 100times and less than 1000times of total resistance.
- Slight continuous vibration such as dither might cause short lifetime of the sensor.
- Do not apply high temperature solder on the terminals.

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Office North America:

Angst+Pfister North America Inc.
10391 Brecksville Rd.
US-Brecksville, OH 44141
Phone +1 440 375-5212
info.apus@angst-pfister.com

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>
