

Conductive Plastic Angle Sensor


CPP-60 Series

- Conductive Plastic Angle Sensor
- Effective Electrical Travel : 355°
- Independent Linearity : $\pm 0.05\%$ (Special Linearity: $\pm 0.03\%$)
- Servo Mount


【Material】

- Housing : Aluminum
- Shaft : Stainless Steel
- Bearing : Stainless steel


■ Dimension [mm]

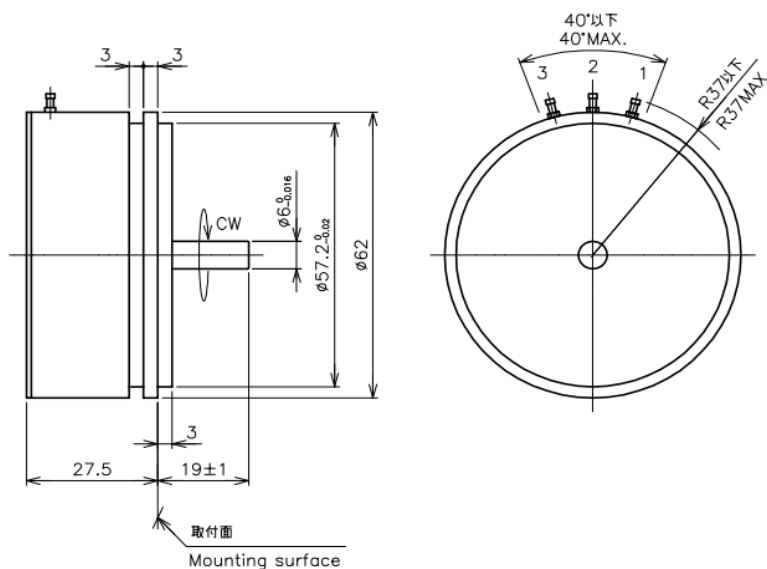

■ Output Characteristics

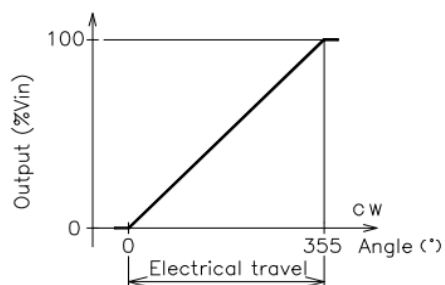


■ Schematic

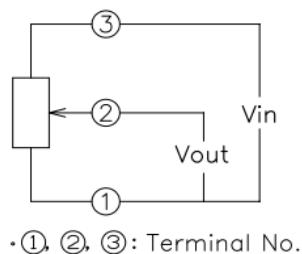

• ①, ②, ③: Terminal No.

■ Mounting

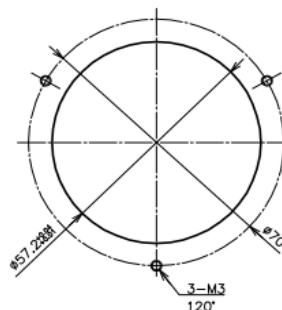

Servo Mount

MIDORI MIDORI PRECISIONS
 URL: <http://www.midori.co.jp>
 E-mail: overseas@midori.co.jp

2012/12

【Model No.】	CPP-60
--------------------	--------

【Electrical Specifications】

Effective Electrical Travel	355 +1, -2	°
Total Resistance	0.5, 1, 2, 5, 10, 20	kΩ
Total Resistance Tolerance	±15	%
Independent Linearity	±0.05 (Special Linearity ±0.03%)	%
Rated Dissipation	3/70°C	W
Output Smoothness	MAX. 0.1	%
Insulation Resistance	MIN. 100/DC1000V	MΩ
Dielectric Strength	AC1000/1 Minute	V
Temperature Coefficient of Resistance	±400	ppm/K

【Mechanical Specifications】


Total Mechanical Travel	360 Endless	°
Torque	MAX. 25	mN·m
Thrust Load Tolerance	2	N
Radial Load Tolerance	4	N
Mass	Approx. 170	g

【Environmental Specifications】

Life Cycles	10 Million	Cycle
Category Temperature Range	-40 - +120	°C
Storage Temperature Range	-40 - +120	°C
Vibration	150m/s ² 2000Hz 3 axis 2 hours each	
Shock	500m/s ² 11ms 6 directions 3 times	

■Accessories

Mounting Cleats : 3 pieces

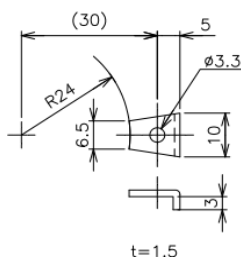**■Handling Instruction**

- To avoid burnout of resistive element, do not supply more than 1mA current to terminal 2.
- Miswiring might cause burnout of resistive element.
- To reduce sliding noise, add load resistance should be more than 100times and less than 1000times of total resistance.
- Slight continuous vibration such as dither might cause short lifetime of the sensor.

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Office North America:

Angst+Pfister North America Inc.
10391 Brecksville Rd.
US-Brecksville, OH 44141
Phone +1 440 375-5212
info.apus@angst-pfister.com

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>
