


Model Number Designation

CP-20H B S P - xx

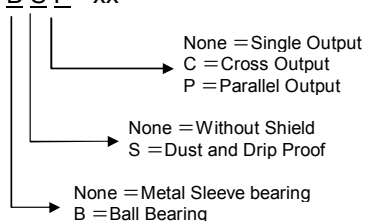

【Model No.】	Single Output				Dual Output P=Parallel, C=Cross			
	CP-20H	CP-20HS	CP-20HB	CP-20HBS	CP-20HP	CP-20HSP	CP-20HBP	CP-20HBSP
					CP-20HC	CP-20HSC	CP-20HBC	CP-20HBSC

【Electrical Specifications】

Effective Electrical Travel	Standard: ± 170 (=340) Option: 270, 300, 359								°
Output Range	10 ~ 90								%Vin
Absolute Linearity	± 1								%FS
Input Voltage	DC5 $\pm$ 0.5								V
Load Resistance	MIN. 10								k Ω
Supply Current	MAX. 16				MAX. 32				mA
Insulation Resistance	MIN. 100/DC50V								M Ω
Output Resolution	12 (0 ~ 100%Vin)								bit
Hysteresis	0.3								%FS
Temp. Characteristics -30 ~ +100°C (Reference Temp. 25°C)	± 1.7								°
2 Output Difference	—				± 1 100 $\pm$ 1(Sum 1,2)	± 1 100 $\pm$ 1(Sum 1,2)	± 1 100 $\pm$ 1(Sum 1,2)	± 1 100 $\pm$ 1(Sum 1,2)	%Vin

【Mechanical Specifications】

Total Mechanical Travel	360 Endless								°
Torque	MAX. 2	MAX. 100	MAX. 2	MAX. 100	MAX. 2	MAX. 100	MAX. 2	MAX. 100	mN·m
Thrust Load Tolerance	2								N
Radial Load Tolerance	5								N
Mass	Approx. 20								g

【Environmental Specifications】

Life Cycles	10 Million								Cycle
Operating Temperature Range	-30 ~ +100								°C
Storage Temperature Range	-30 ~ +100								°C
Vibration	200mm ² /s, 5 - 500Hz, 6 minutes, 3 axis, 3 times (Room Temp.)								
Shock	1000mm ² /s, 6ms, 3 axis, 3 times (Room Temp.)								
EMS	100V/m 200MHz - 1GHz (ISO 11452-2)								
ESD (Case To Each Terminal)	MAX. ± 16 (IEC 61000-4-2)								kV
ESD (Between Each Terminal)	MAX. ± 8 (IEC 61000-4-2)								kV
IP Level	IP50	IP65 *	IP50	IP65 *	IP50	IP65 *	IP50	IP65 *	

* Shielded mounting surface side only

Handling Instruction

- Do not use Hall-IC sensor as a variable resistor.
- This product may be influenced from external magnetic field.
- Use this sensor in the place where is protected from ESD.

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Office North America:

Angst+Pfister North America Inc.
10391 Brecksville Rd.
US-Brecksville, OH 44141
Phone +1 440 375-5212
info.apus@angst-pfister.com

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>
