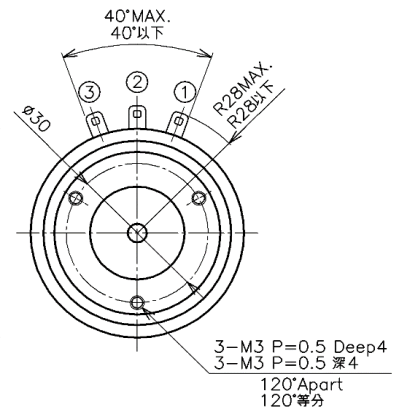
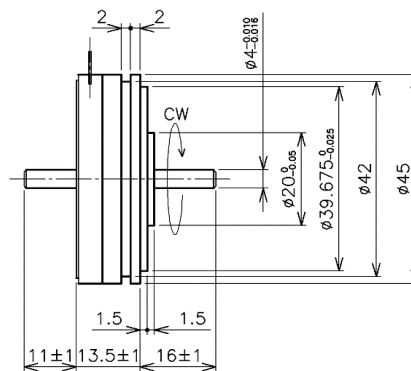
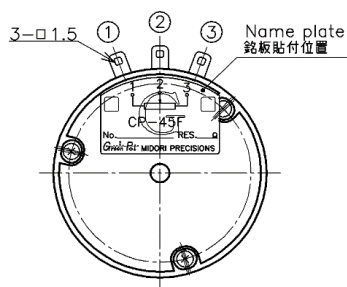
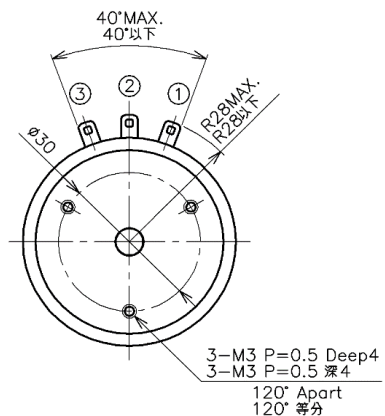
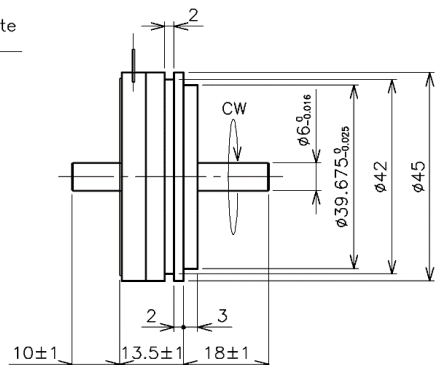
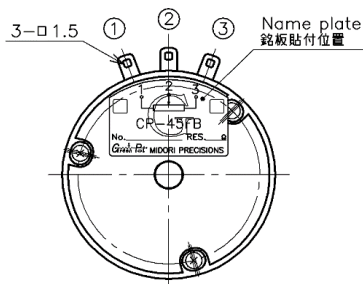


Conductive Plastic Angle Sensor

CP-45F Series CP-45F, CP-45FB



- Conductive Plastic Angle Sensor
- Prolonged lifetime - 50 Mil. Revolution min.
- Effective Electrical Travel : 350°
- Independent Linearity : $\pm 0.1\%$
- Ratio Output
- Servo Mount and Screw Mount
- 【Options】
- Shaft L2 side 0mm. (w/Screw driver slot)
- Additional Center Tap :
C.T(A) ... No shorted angle
C.T(B) ... Shorted on Tap (Shorted angle 3°approx.)

Dimension [mm]**CP-45F****CP-45FB**



Dimension [mm]

Option : Shaft L2=0 type


CP-45F L2=0

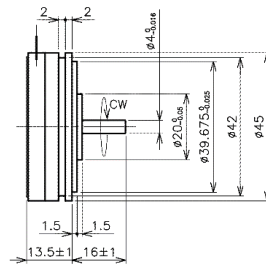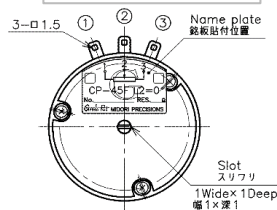


CP-45FB L2=0

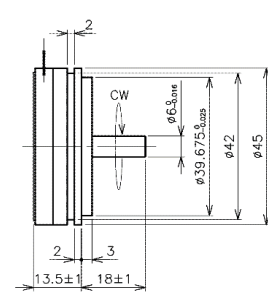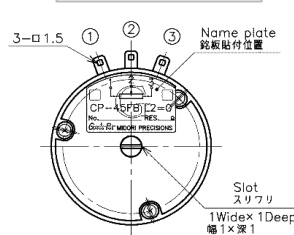


Output Characteristics

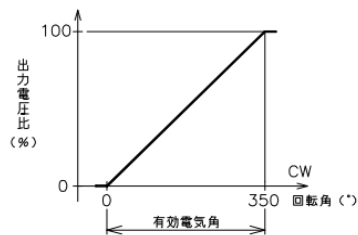


Schematic

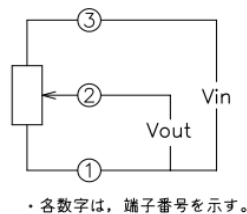

Mounting

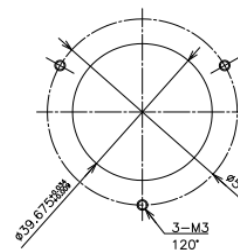

Servo Mount

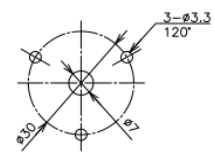

Screw Mount

Model No.]

CP-45F
(Shaft Φ4mm)CP-45FB
(Shaft Φ6mm)

Electrical Specifications

Effective Electrical Travel	350 +3, -2	°
Total Resistance	(Standard) 1, 2, 5, 10 (Option) 0.5, 20	k Ω
Total Resistance Tolerance	±15	%
Independent Linearity	±0.1	%
Rated Dissipation	3/70°C	W
Output Smoothness	MAX. 0.1	%
Insulation Resistance	MIN. 100/DC1000V	M Ω
Dielectric Strength	AC1000/1 Minute	V
Temperature Coefficient of Resistance	±400	ppm/K

Mechanical Specifications


Total Mechanical Travel	360 Endless	°
Torque	MAX 1.8	mN·m
Thrust Load Tolerance	2	N
Radial Load Tolerance	6	N
Mass	51	g

Environmental Specifications

Life Cycles	50 Million	Cycle
Category Temperature Range	-40~+120	°C
Storage Temperature Range	-40~+120	°C
Vibration	200m/s ² 2000Hz 3 axis 2 hours each	
Shock	600m/s ² 11ms 6 directions 3 times	


■ Accessories

Mounting Cleats : 3 pieces

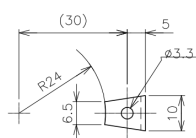

t=1.2

[CP-45F Series Model Number Designation]

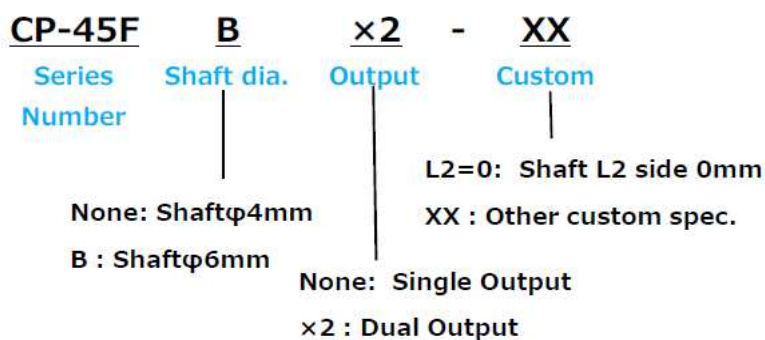

■ Handling Instruction

- To avoid burnout of resistive element, do not supply more than 1mA current to terminal 2.
- Miswiring might cause burnout of resistive element.
- To reduce sliding noise, add load resistance should be more than 100times and less than 1000times of total resistor.
- Slight continuous vibration such as dither might cause short lifetime of the sensor.

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Office North America:

Angst+Pfister North America Inc.
10391 Brecksville Rd.
US-Brecksville, OH 44141
Phone +1 440 375-5212
info.apus@angst-pfister.com

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>
