

Description

The T7 is now IP68 rated. For more details, download the T7_IP_Certification.

The T7 is a solid state absolute inclinometer that senses tilt angles over a full 360 ° range in a single axis. The T7 incorporates a number of breakthroughs to create a new type of inclinometer that is rugged, compact, fast, flexible and easy to use.

The T7 is available in several interface and protocol options. The physical interface can be RS232 or RS485 . The protocol can be either US Digital's serial protocol or Modbus RTU. The RS232 version supports a single T7 with up to 100 ft of cable. For users that need longer cable lengths or multiple T7s on a single bus, the RS485 version supports up to 32 T7s on the bus. Power for each T7 is supplied over the network cable.

The Modbus RTU version is suitable for users that require an industry standard, open protocol. The host may access each T7 on the bus using standard Modbus read/write register function codes.

The T7 calculates tilt angle (inclination) by sensing the acceleration from solid state accelerometers integrated into a monolithic chip. Gravity, centrifugal forces, and linear speed changes are all forms of acceleration. The T7 will report the mathematically calculated tilt angle based on all sensed acceleration(s).

The serial port interface provides an efficient way to read and write data to a network of T7s. All configurations and parameters are stored in nonvolatile memory. A Windows demo application is provided for displaying the angles and temperature as well as setting operating modes, orientation, zero position, damping / averaging time, direction, and more for every T7 on the network. In addition, a Windows DLL gives the user a set of simple functions to read and write data to a network of T7s.

Typical applications include heavy construction equipment, dredging machinery, mining equipment, solar tracking and warehouse automation.



Features

- Full 360 degree operation
- ± 0.1 degree accuracy
- IP68 rated
- RS232 or RS485 interface
- MODBUS RTU version available
- RS485 version supports 32 devices on the bus
- 5.5V to 30V power supply range



Software

- www.usdigital.com/support/software/t7-software
- www.usdigital.com/assets/USDProducts.zip (.zip file with installer)



Mechanical Drawing

Rev. 20181129095038




T7

Networked Absolute Inclinometer

Page 2 of 9



T7 Networked Absolute Inclinometer

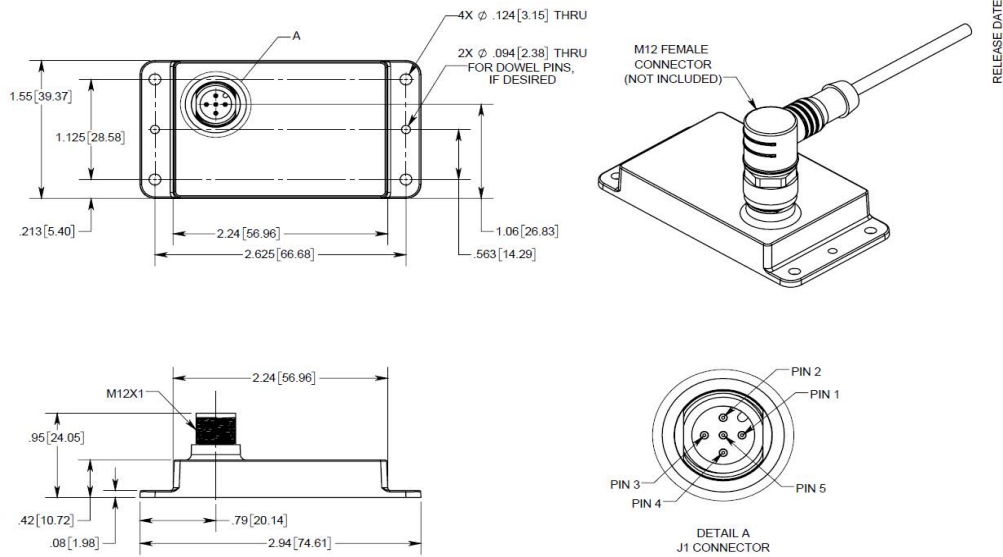

Environmental

Parameter	Min.	Typ.	Max.	Units
Operating Temperature	-10	25	70	C
Acceleration Limit (for internal sensor)			± 50000	G
Ingress Protection Rating	IP68			
Electrostatic Discharge, IEC-61000-4-2		± 15		kV



Electrical

Parameter	Min.	Typ.	Max.	Units
Supply Voltage	5.5	24	30	V
Supply Current (Operating, 22C ambient)				
@ 5.5V		50		mA
@ 12V		30		
@ 24V		20		
Bandwidth			8	Hz

Rev. 20181129095038



T7

Networked Absolute Inclinometer

Page 3 of 9



Mechanical

Parameter	Specification
Case Material	Glass filled polycarbonate
Weight	1.2 oz (34 g) nom.



RS232 Versions

Parameter	Max.	Units
Number of T7s on bus	1	
Maximum total cable length	100	feet

Note: The T7 can drive 100 ft. of cable. Some PC's have limited drive on the RS232 bus which will limit the maximum cable length to less than 100 ft.



RS485 Versions

Parameter	Max.	Units
Number of T7s on bus	32	
Maximum total cable length	1000	feet

Notes:

- 1) Uses RS485 two wire network
- 2) Uses "fail-safe" drivers so bias resistors are not required
- 3) In most applications, the RS485 network does not need termination at 9600 bps with less than 1000 feet of cable. If termination is used, the RS485 network should be terminated with a 120-150 ohm resistor between BUS+ and BUS- at the source and at the last T7-1-485/T7-1-MOD4 on the network. US Digital terminating CAN cables (CA-CM-PS-CFTR) may be used at the last T7 on the bus to terminate it.




RS485 Power Supply Voltage

For a given network size, a minimum **T7-1-485/T7-1-MOD4** power supply voltage is needed to ensure that the last **T7** on the network is powered by at least 5.5V. The minimum power supply voltage can be calculated based on the number of networked **T7s**, the cable resistance/configuration and the current consumption of each **T7** as a function of voltage. The following tables show the recommended minimum power supply voltage as a function of cable length and number of **T7s** for several common network wiring schemes. The tables assume that US Digital T7 cables with a resistance of 3.3 ohms per hundred feet (#22 AWG) for the two power lines are used. US SD T7 cables have a twisted pair for the data wires and can be used for both RS485 and RS232 versions. The following data is for room temperature (22C) operation.


Rev. 20181129095038

Recommended minimum power supply voltage for T7s equally spaced on a total cable length, L. Stub length from T-adapter to a T7 is 6 feet. N is the number of T7's in the network.

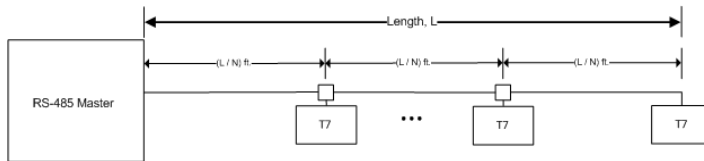

Number of T7's	Nominal supply current	Total cable length, L (T7's equally spaced)									
		100 ft	200 ft	300 ft	400 ft	500 ft	600 ft	700 ft	800 ft	900 ft	1000 ft
1	55 mA	9	9	9	9	9	9	9	9	9	9
2	110 mA	9	9	9	9	9	9	9	9	9	9
3	150 mA	9	9	9	9	9	9	9	9	12	12
4	200 mA	9	9	9	9	9	9	12	12	12	12
5	250 mA	9	9	9	9	9	12	12	12	12	12
10	480 mA	9	9	9	12	12	12	12	15	15	15
15	700 mA	9	9	12	12	15	15	15	18	18	18
20	1 A	9	12	12	15	15	15	18	18	24	24
25	1.2 A	9	12	12	15	18	18	24	24	24	24
32	1.5 A	9	12	15	18	18	24	24	24	26	26

Recommended minimum power supply voltage for T7s spaced 9 feet apart after an initial leader cable length, L. Stub length from T-adapter to a T7 is 6 feet.

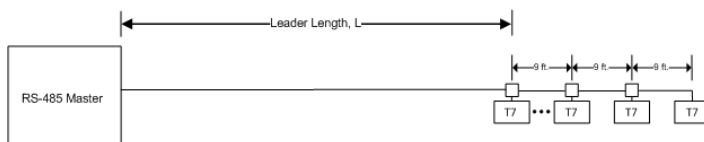

Number of T7's	Nominal supply current	Leader length, L (T7's spaced 9 ft. apart after leader)									
		100 ft	200 ft	300 ft	400 ft	500 ft	600 ft	700 ft	800 ft	900 ft	1000 ft
1	55 mA	9	9	9	9	9	9	9	9	9	9

Rev. 20181129095038

2	110 mA	9	9	9	9	9	9	9	12	12	-
3	150 mA	9	9	9	9	9	12	12	12	12	-
4	200 mA	9	9	9	12	12	12	12	12	15	-
5	250 mA	9	9	12	12	12	12	15	15	15	-
10	480 mA	9	12	12	15	15	18	18	24	24	-
15	700 mA	12	15	15	18	24	24	24	26	-	-
20	900 mA	12	15	18	24	24	26	30	-	-	-
25	1.1 A	15	18	24	24	28	-	-	-	-	-
32	1.3 A	18	24	26	30	-	-	-	-	-	-

Modbus Version

The RS232 and RS485 versions of the T7 are available with the Modbus RTU protocol. Modbus Function Codes 3 (Read Holding Register) and 6 (Write Single Register) are supported. User defined Function Code 110 is used for some operations such as setting serial port parameters and the device address. If non-US Digital Modbus devices are connected to the same bus, it is recommended that only Function Codes 3 and 6 be used for non-USD devices.

Accuracy and Noise

Parameter	Max.	Units	Test Conditions
Axis 2 Relative Angular Error	±0.1	Angular Degrees	0 ° C to 70 ° C, on-axis

† Up to ±5 ° off-axis operation is possible with 2? (95%) confidence on the maximum angular error

Damping Time, milliseconds	Standard Deviation (?) of Angle Noise, degrees	95% confidence interval (± 2?), degrees
10	.060	.121
20	.037	.074
50	.021	.042
100	.015	.029
200	.010	.021
500	.007	.014
1000	.005	.011
2000	.004	.008

Rev. 20181129095038

Damping Time, milliseconds	Standard Deviation (?) of Angle Noise, degrees	95% confidence interval ($\pm 2\sigma$), degrees
5000	.003	.006

- Measurements taken at 25 ° C
- Damping time is a user programmable parameter

Axis Orientation

Axis Orientation:



Note: T7 shown with factory default configuration.

Noise Filtering

The **T7** uses a FIR (Finite Impulse Response) digital filter to provide electronic damping of the angle readings. The digital filter's impulse response has a triangular weighting that decays linearly to zero. The damping time is user programmable from 2 milliseconds to 5000 milliseconds. Since the sensor bandwidth is 8 Hz, damping times below 125 milliseconds do not provide any faster response. Increasing the damping time will average more samples together to form the reported angle. This will reduce noise in the output but


Rev. 20181129095038

increase the response time.



Interfacing with a host computer

An inclinometer network assembled with the RS232 or RS485 version of the T7 is shown below.

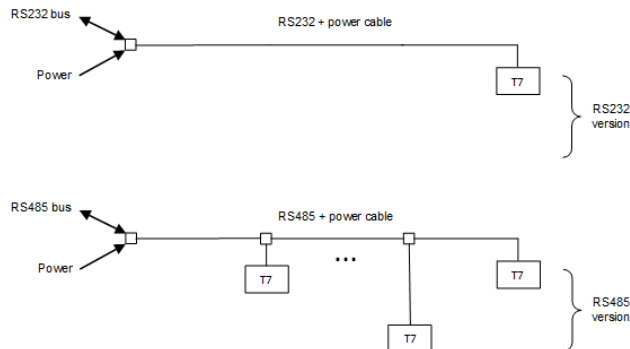

US Digital sells all the cables and connectors needed to wire a T7 network. The T7 uses the same connector for all interface versions.

Regardless of the interface option, a host PC, PLC or microcontroller communicates with a network of T7s by sending/receiving simple serial port commands over the RS232 or RS485 bus.



Network Address

T7-1-232, T7-1-485 Addressing

Each T7 on the network must be assigned a unique address from 1 to 100 or 127 (decimal). Address assignment is optional for the RS 232 version. All T7s are shipped with a default address of 127. Address 126 is a special broadcast address - all T7s will listen and respond to commands sent to this address. To assign an address to a T7 unit, connect one T7 to a PC using a USB to RS232/RS485 adapter. The address can be set using the included PC based "T7 Demo" software. Alternately, a host computer can send the "Set Address" serial port command to the T7. This procedure only needs to be done once for each T7 since the address is stored in non-volatile flash memory.


T7-1-MOD2, T7-1-MOD4 Addressing

Each T7 on the network must be assigned a unique address from 1 to 100 (decimal). All T7s are shipped with a default address of 127. Address 0 is the Modbus broadcast address. To assign an address to a T7 unit, connect one T7 to a PC using a USB to RS232/RS485 adapter. The address can be set using the included PC based "T7 Demo" software. Alternately, a host computer can send a special "Set Address" command to the T7. This procedure only needs to be done once for each T7 since the address is stored in non-volatile flash memory.

Rev. 20181129095038



J1 Pin-out

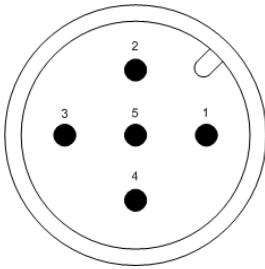

Pin	Description
1	Shield
2	Vin
3	GND
4	TXD / BUS+
5	RXD / BUS-



Default Configuration

All T7

units ship from US Digital with a default configuration. Configuration parameters are stored in non-volatile flash memory and can be easily changed by the user. The specifications are shown below. However, in larger quantities, units can be preconfigured with any of the available settings noted in the **T7 Communication User Guide** or **T7 Modbus Communication User Guide**. Please contact customer service.

Default Configuration:

- Address = 127
- Single-axis version uses Axis 2
- Angle output range set to +/-180 (-179.99 to 179.99) deg.
- Counting Direction set to "forward"
- Angle Offset set to 0
- Damping time = 1000 milliseconds
- USD protocol versions use 115200 bps, 8 data bits, no parity, 1 stop bit
- Modbus protocol versions use 9600 bps, 8 data bits, even parity, 1 stop bit

Rev. 20181129095038

**T7****Networked Absolute Inclinometer**

Page 9 of 9


**Ordering Information**T7 - - **Number of Calibrated AxisInterface**

1 = 232 =RS232
 485 =RS485
 MOD2 =RS232 Modbus
 MOD4 =RS485 Modbus

Notes

Cables and connectors are not included and must be ordered separately.
For ordering information please see the Compatible Cables / Connectors section above.
US Digital® warrants its products against defects in materials and workmanship for two years. See complete warranty for details.

Rev. 20181129095038



We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Office North America:

Angst+Pfister North America Inc.
10391 Brecksville Rd.
US-Brecksville, OH 44141
Phone +1 440 375-5212
info.apus@angst-pfister.com

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>
