

INSTALLATION GUIDE

Draw wire sensors series PSX50, PSX80, PSX120

FIRST STEPS

Please read this manual carefully before initial operation!

Unpacking and checking:

Carefully lift the device out of the box by grabbing the housing. Do not pull the rope. After unpacking the device, check it for any visible damage as a result of rough handling during the shipment. Check the delivery for completeness.

If necessary consult the transportation company, or contact WayCon directly for further assistance.

- Mount the sensor at the designated place by using the fixing holes before extracting the rope and before attaching the rope to the measuring target.
- The sensor is usually installed by using the regular mounting plate. By disassembling the mounting plate, threads will become visible in the sensor housing for alternative installation. Sensors with option rope outlet S2 and S3 have a modified base plate.
- Open the rope clip after the sensor is fully mounted and carefully extract the measuring rope. Hook the rope clip on the measuring target and close the bracket of the clip. For safety reasons put a screw driver through the clip to extract the rope.

HANDLING THE WIRE ROPE


- When installing or operating the sensor, take care not to let the rope snap back by mistake or extract the rope over the specified measurement range, as this might destroy the sensor.
- The rope must be extracted from the sensor vertically. The maximum variation from the vertical is 3°. Avoid extracting the rope at an inclination, since the durability of the instrument would shorten considerably. If it is not possible to keep the limit of 3°, a deflection pulley has to be used.
- Guide the rope preferably in corners or guarded in channels to prevent pollution or accidental touch.
- Avoid guiding the rope over edges or corners. Use a deflection pulley instead.
- Do not operate the sensor if the rope is buckled or damaged. A ripping of the rope may lead to injuries or a damaging of the sensor.

MOUNTING


Mounting standard rope outlet, rope outlet sideways top (S1)

The sensor is usually installed by using the regular mounting plate. By disassembling the mounting plate, there are threads in the sensor housing for alternative installation:


SX50: 2 x M3 und 2 x M5

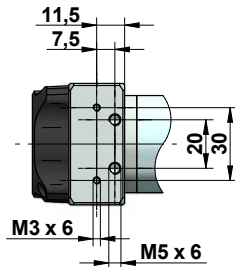

SX80: 2 x M4

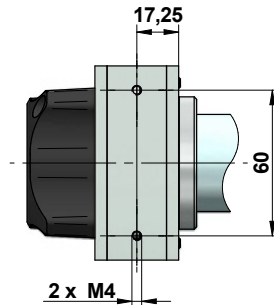


SX120: 2 x M4

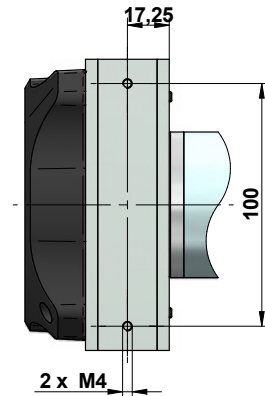


Mounting rope outlet sideways bottom (S2), rope outlet bottom (S3)

Sensors with option rope outlet S2 and S3 have a modified base plate:


SX50

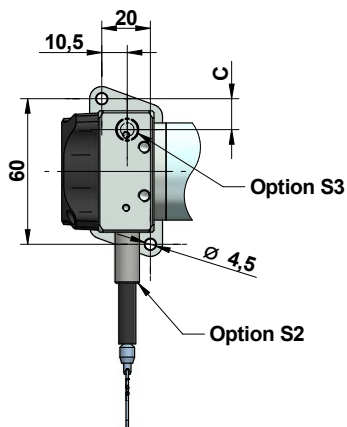

SX80

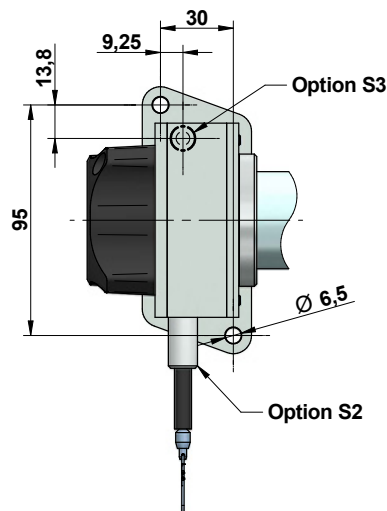


SX120

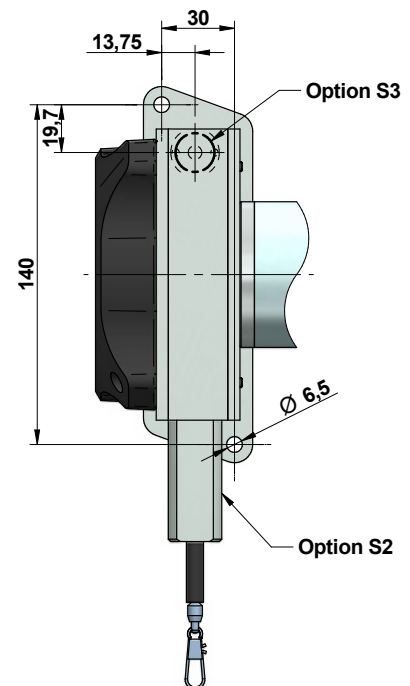

Measurement range [mm]	Option	C
50 / 150 / 250	Standard	21.3
75 / 225 / 750	Standard	17
100 / 300 / 500 / 1000	Standard	12.75
125 / 375 / 625 / 1250	Standard	10,3

ELECTRICAL CONNECTION ANALOG OUTPUT

Cable output cable colours	Connector output M12, male	1 k Ω	0...10 V	4...20 mA	0...5 V, 0...10 V (teachable)
BN	Pin 1	+V	+V	+V	+V
WH	Pin 2	Cursor	Signal	n. c.	Signal
BU	Pin 3	GND	GND	Signal	GND
BK	Pin 4	n. c.	GND _{Signal}	n. c.	MFL ¹⁾

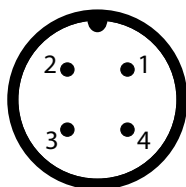


¹⁾ Multi-functional line

ELECTRICAL CONNECTION INCREMENTAL OUTPUT


SX50, SX80, SX120: Connector output M12, male, 8 pins

Signal	GND	+V	A	/A	B	/B	Z	/Z
Pin	1	2	3	4	5	6	7	8

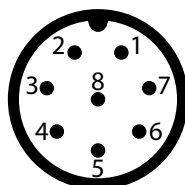

SX80, SX120: Connector output M23, male, 12 pins

Signal	GND	+V	A	/A	B	/B	Z	/Z	GND _{sens}	+V _{sens}	n. c.
Pin	10	12	5	6	8	1	3	4	11	2	7, 9

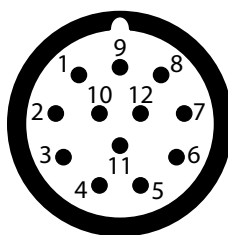

SX50, SX80, SX120: Cable output

Signal	GND	+V	A	/A	B	/B	Z	/Z	GND _{sens} ¹⁾	+V _{sens} ¹⁾
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	GY-PK	RD-BU

¹⁾ SX80 and SX120 only

ELECTRICAL CONNECTION SSI

SX50: Cable output ¹⁾

Signal	GND	+V	C+	C-	D+	D-	SET	DIR	Status	H
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	VT	shield


SX80, SX120: Cable output ¹⁾

Signal	GND	+V	C+	C-	D+	D-	SET	DIR	Status	H
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	BK	shield

¹⁾ isolate unused wires individually before initial start-up


SX80, SX120: Connector output M12, male, 8 pins

Signal	GND	+V	C+	C-	D+	D-	SET	DIR	H
Pin	1	2	3	4	5	6	7	8	shield

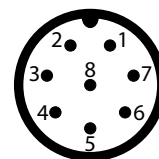

SX80, SX120: Connector output M23, male, 12 pins

Signal	GND	+V	C+	C-	D+	D-
Pin	1	2	3	4	5	6
Signal	SET	DIR	Status	n. c.		H
Pin	7	8	9	10, 11, 12		shield

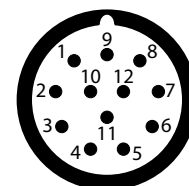



ELECTRICAL CONNECTION CAN_{OPEN}

SX50: Cable output ¹⁾

Signal	GND	+V	CAN_L	CAN_H	CAN_GND
Cable colour	WH	BN	YE	GN	GY

SX80, SX120: 2 x Connector output M12

	Bus OUT (female)					Bus IN (male)				
Signal	GND	+V	CAN_L	CAN_H	CAN_GND	GND	+V	CAN_L	CAN_H	CAN_GND
Pin	3	2	5	4	1	3	2	5	4	1

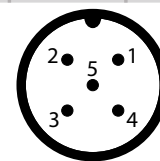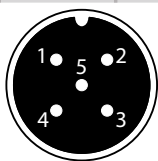

SX80, SX120: cable gland radial (removable bus terminal cover)

	Bus OUT					Bus IN				
Signal	GND	+V	CAN_L	CAN_H	CAN_GND	GND	+V	CAN_L	CAN_H	CAN_GND
Acronym	0 V	+V	CL	CH	CG	0 V	+V	CL	CH	CG

¹⁾ isolate unused wires individually before initial start-up

ELECTRICAL CONNECTION PROFIBUS

SX50, SX80, SX120: cable gland radial (removable bus terminal cover)

	Bus IN				Bus OUT			
Signal	B	A	GND	+V	GND	+V	B	A
Terminal	1	2	3	4	5	6	7	8

The shield of the connection cable must be connected over a large area via the cable gland.

SX50, SX80, SX120: 3 x Connector output M12

Bus IN (male)	Signal	n. c.	PB_A	n. c.	PB_B	shield	
	Pin	1	2	3	4	5	
Power supply (male)	Signal	+V	n. c.	GND	n. c.	-	
	Pin	1	2	3	4	-	
Bus OUT (female)	Signal	BUS_VDC ¹⁾	PB_A	BUS_GND ¹⁾	PB_B	shield	
	Pin	1	2	3	4	5	


¹⁾ for supplying an external Profibus termination resistor

ELECTRICAL CONNECTION ETHERCAT, PROFINET


SX50, SX80, SX120: 3 x Connector output M12

Bus IN or Bus 1	Signal	Transmit data +	Receive data +	Transmit data -	Receive data -
	Acronym	TxD+	RxD+	TxD-	RxD-
	Pin	1	2	3	4
Power supply	Signal	Voltage +	n. c.	Voltage -	n. c.
	Acronym	+V	n. c.	0 V	n. c.
	Pin	1	2	3	4
Bus OUT or Bus 2	Signal	Transmit data +	Receive data +	Transmit data -	Receive data -
	Acronym	TxD+	RxD+	TxD-	RxD-
	Pin	1	2	3	4


Bus IN D-coded
(female)

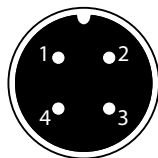

Power supply
(male)

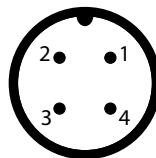

Bus OUT D-coded
(female)

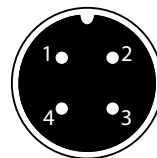


ACCESSORIES CABLE

Analog output and power supply Profibus, EtherCat and Profinet

Cable with mating connector M12 (female), 4 poles

K4P2M-S-M12	2 m, straight connector, IP67, shielded
K4P5M-S-M12	5 m, straight connector, IP67, shielded
K4P10M-S-M12	10 m, straight connector, IP67, shielded
K4P2M-SW-M12	2 m, angular connector, IP67, shielded
K4P5M-SW-M12	5 m, angular connector, IP67, shielded
K4P10M-SW-M12	10 m, angular connector, IP67, shielded

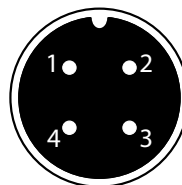


Pin	Cable colour
1	BN
2	WH
3	BU
4	BK

Incremental output

Cable with mating connector M12 (female), 8 poles


K8P2M-S-M12	2 m, straight connector, IP67, shielded
K8P5M-S-M12	5 m, straight connector, IP67, shielded
K8P10M-S-M12	10 m, straight connector, IP67, shielded
K8P2M-SW-M12	2 m, angular connector, IP67, shielded
K8P5M-SW-M12	5 m, angular connector, IP67, shielded
K8P10M-SW-M12	10 m, angular connector, IP67, shielded

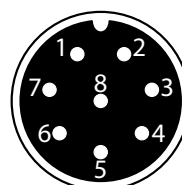

Pin	1	2	3	4	5	6	7	8
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD

Cable with mating connector M23 (female), 12 poles

K12P2M-S-M23	2 m, straight connector, IP67, shielded
K12P5M-S-M23	5 m, straight connector, IP67, shielded
K12P10M-S-M23	10 m, straight connector, IP67, shielded
K12P2M-SW-M23	2 m, angular connector, IP67, shielded
K12P5M-SW-M23	5 m, angular connector, IP67, shielded
K12P10M-SW-M23	10 m, angular connector, IP67, shielded

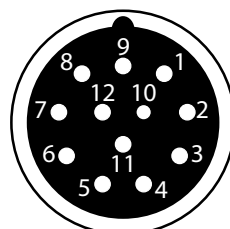


Pin	1	2	3	4	5	6	7	8	9	10	11	12
Cable colour	PK	RD-BU	BU	RD	GN	YE	-	GY	-	WH	GY-PK	BN

Digital output SSI:

Cable with mating connector M12 (female), 8 poles

K8P2M-S-M12	2 m, straight connector, IP67, shielded
K8P5M-S-M12	5 m, straight connector, IP67, shielded
K8P10M-S-M12	10 m, straight connector, IP67, shielded
K8P15M-S-M12	15 m, straight connector, IP67, shielded

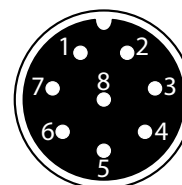


Pin	1	2	3	4	5	6	7	8
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD

ACCESSORIES CABLE

Digital output SSI:

Cable with mating connector M23 (female), 12 poles

K12P02M-S-M23-SSI	2 m, straight connector, shielded
K12P05M-S-M23-SSI	5 m, straight connector, shielded
K12P10M-S-M23-SSI	10 m, straight connector, shielded
K12P15M-S-M23-SSI	15 m, straight connector, shielded

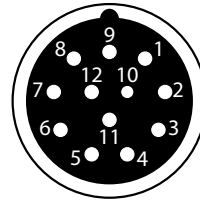


Pin	1	2	3	4	5	6	7	8	9	10	11	12
Cable colour	WH	BN	GN	YE	GY	PK	BU	RD	BK	VT	GY-PK	RD-BU

Digital output CANopen:

Cable with mating connector M12 (female), 5 poles

K5P2M-B-M12-CAN	2 m, straight connector, shielded
-----------------	-----------------------------------


Pin	1	2	3	4	5
Cable colour	shield	RD	BK	WH	BU

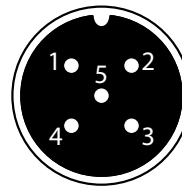

Cable with mating connector M12 (male), 5 poles

K5P2M-S-M12-CAN	2 m, straight connector, shielded
-----------------	-----------------------------------

Pin	1	2	3	4	5
Cable colour	shield	RD	BK	WH	BU

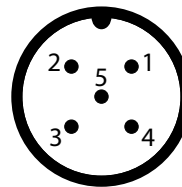


Digital output Profibus (Bus In / Bus Out):

Cable with mating connector M12 (female), 5 poles

K5P2M-B-M12-PROF	2 m, straight connector, shielded
------------------	-----------------------------------


Pin	1	2	3	4	5
Cable colour	-	GY	-	RD	-

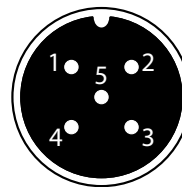

Cable with mating connector M12 (male), 5 poles

K5P2M-S-M12-PROF	2 m, straight connector, shielded
------------------	-----------------------------------


Pin	1	2	3	4	5
Cable colour	-	GY	-	RD	-

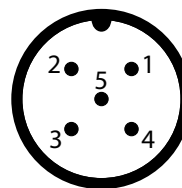

Digital output EtherCat and Profinet (Bus In / Bus Out):

Cable with mating connector M12 (female), 4 poles

K4P2M-S-M12-CAT	2 m, straight connector, shielded
K4P5M-S-M12-CAT	5 m, straight connector, shielded
K4P10M-S-M12-CAT	10 m, straight connector, shielded

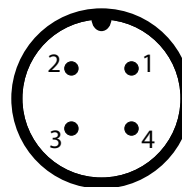

Pin	Cable colour
1	YE
2	WH
3	OG
4	BU



WARNING NOTICES

- Do not try to open the device. The stored energy of the spring drive may lead to injuries when being mishandled.
- Do not touch the rope when operating the sensor.
- When mounting outdoors protect the sensor and the rope from icing at temperatures below 0 °C. The usage of a deflection pulley may help defrosting the wire rope.
- When operating the sensor in a humid environment, install the sensor with the rope outlet downwards. Otherwise water will gather inside the housing, which leads to corrosion. Where applicable use option S3.

MAINTENANCE

The devices are maintenance-free. If however, the rope is soiled due to adverse environmental conditions, it can be cleaned with a cloth drenched in resin-free machine oil.

DECLARATION OF EU-CONFORMITY

This is to certify that the products

Classification
Product series

draw wire sensors

PSX

fulfill the current request of the following EU-directives:

EMC-directive 2004/108/EC (until April 19th, 2016)
 2014/30/EU (from April 20th, 2016)

applied harmonized standards:
IEC 61326-1:2013

The declaration of conformity loses its validity if the product is misused or modified without proper authorisation.

We are here for you. Addresses and Contacts.

Headquarter Switzerland:

Angst+Pfister Sensors and Power AG
Thurgauerstrasse 66
CH-8050 Zurich
Phone +41 44 877 35 00
sensorsandpower@angst-pfister.com

Office Germany:

Angst+Pfister Sensors and Power Deutschland GmbH
Edisonstraße 16
D-85716 Unterschleißheim
Phone +49 89 374 288 87 00
sensorsandpower.de@angst-pfister.com

Office North America:

Angst+Pfister North America Inc.
10391 Brecksville Rd.
US-Brecksville, OH 44141
Phone +1 440 375-5212
info.apus@angst-pfister.com

Scan here and get an overview of personal contacts!



<https://sensorsandpower.angst-pfister.com/en/>
